


## HealthSpec DecoCrobe-BC Antimicrobial Full-Broadcast Decorative System

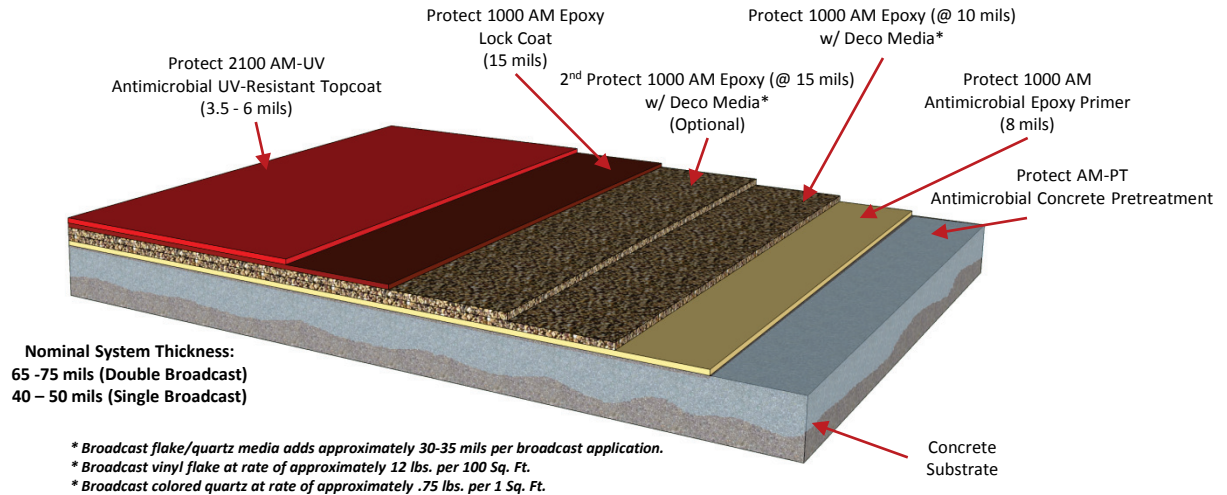

### System Description:

A decorative antimicrobial system consisting of a deep-substrate penetrating antimicrobial concrete pretreatment followed by an antimicrobial epoxy primer. The system then receives two applications of an antimicrobial epoxy with decorative media. An antimicrobial “lock coat” is applied and the system is top-coated with a UV-blocking antimicrobial topcoat. This highly decorative system exhibits excellent chemical, wear and abrasion resistance and is suited for healthcare areas requiring performance combined with aesthetics. Areas of use include hallways, cafeterias, restrooms and examination rooms.

### System Advantages:

- Redundant antimicrobial protection throughout entire system and into substrate
- Quartz or flake media provides beauty and aesthetics
- Excellent chemical resistance
- Excellent wear characteristics
- USDA compliant/CFIA approved
- Unlimited color blends to match facility color scheme

### System Installation Overview:

1. Wet concrete substrate prior to applying Protect AM-PT
2. Spray-apply Protect AM-PT in two passes and allow to fully purge concrete
3. Apply Protect 1000 AM antimicrobial epoxy primer and allow to cure
4. Apply Protect 1000 AM with deco media\* (1<sup>st</sup> application) and allow to cure
5. Apply Protect 1000 AM with deco media\* (2<sup>nd</sup> application) and allow to cure
6. Apply Protect 1000 AM antimicrobial epoxy lock coat and allow to cure
7. Apply Protect 2100 AM-UV antimicrobial urethane topcoat and allow to cure